




Welcome to LoneStar Tracking! Thank you for choosing LST to help you monitor your assets 24/7 from any smart

We recommend professional installation of the Scorpion LTE.

The Scorpion LTE has several inputs and outputs that can be used for different purposes. This guide will show you how to connect a buzzer.

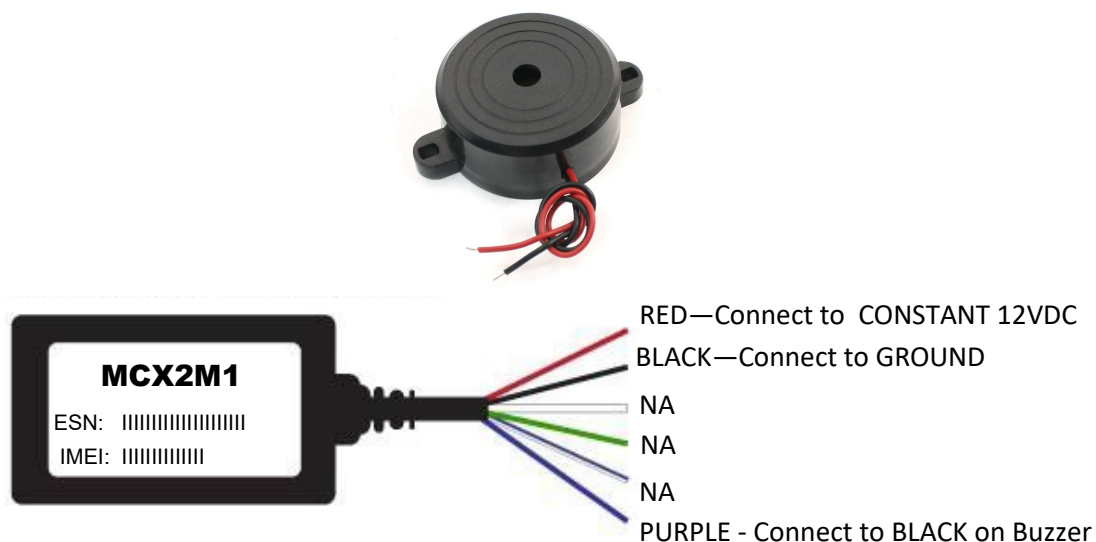

To connect your buzzer, first connect the RED wire from your buzzer to a +12 power source. Next, connect the BLACK wire from the buzzer to the PURPLE wire on your GPS tracker.

Login Site: <http://fleetone.lonestartracking.com>

Your Username and Password were emailed to you on or shortly after purchase. (Please feel free to call, chat or email us to reset.)

For our iPhone or Android apps, visit the app store and search for “LoneStar Tracking”.

